



<https://xtool.es/>
 Telefono fijo: +34 937 371 351
 sales@xtool.es

Mazda SEAT Function List V11.81

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master, A80 Pro, A80 Pro Master, Nitro GT, Nitro XT Edition products.

- * This feature is new.
- ✓ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Brand	Module	Capacity	EngineType	Year	Remarks
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2005 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3_T	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3_T	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3_T	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	3.0L	AJ	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2006 (MY)	Passenger side seat reset sensor is reset to zero
马自达	MAZDA6 (North America/General)	2.3L	L3	2006 (MY)	Passenger side seat reset sensor is reset to zero

马自达	MAZDA3/AXELA	2.5L	PY	Other	Calibration Of Seat Weight Sensor (SWS)
马自达	MAZDA3/AXELA	2.2L	SH Engine	Other	Calibration Of Seat Weight Sensor (SWS)
马自达	MAZDA3/AXELA	2.2L	SH Engine	Other	Calibration Of Seat Weight Sensor (SWS)
马自达	MAZDA6 (GH, After Facelift) / ATENZA	2.5L	L5	Other	Passenger side seat reset sensor is reset to zero

XTOOL