



<https://xtool.es/>
Telefono fijo: +34 937 371 351
sales@xtool.es

MINI Function list V11.61

Tips and Instructions:

- * This feature is new.
- √ This feature is supported.
- This feature is not supported.
- ※ This feature is partially supported.

Functions left with blank is not supported.								
Model Series	Part	Systems	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Physical HW
R50/R52/R53	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R50/R52/R53	Body	AIC Automatic Interval control	√	√	√	√		
R50/R52/R53	Body	BM On-board monitor	√	√	√	√	√	
R50/R52/R53	Body	CDC CD Changer	√	√	√		√	√
R50/R52/R53	Body	CVM/CVM2 Convertible top module	√	√	√	√	√	√
R50/R52/R53	Body	DSP Digital Sound Processor	√	√	√	√		
R50/R52/R53	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R50/R52/R53	Body	KOM Instrument cluster	√	√	√	√	√	
R50/R52/R53	Body	LRA Automatic headlight vertical aim control	√	√	√	√	√	
R50/R52/R53	Body	MFL Multifunction steering wheel I	√	√	√			
R50/R52/R53	Body	MFL Multifunction steering wheel II	√	√	√			
R50/R52/R53	Body	NAJ Navigation computer,Japan	√	√	√	√	√	
R50/R52/R53	Body	NAV Navigation computer,Europe	√	√	√	√		

R50/R52/R53	Body	PDC Park distance control	√	√	√	√	√	√
R50/R52/R53	Body	RAD Radio	√	√	√	√	√	√
R50/R52/R53	Body	RLS Rain/Light Sensor	√	√	√	√		√
R50/R52/R53	Body	SBBF Seat occupancy,passenger	√	√	√			
R50/R52/R53	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R50/R52/R53	Body	ULF Universal charging and hands-free facility	√	√	√	√	√	√
R50/R52/R53	Body	VID Video module	√	√	√			
R50/R52/R53	Body	ZKE Central Body electronics BC1	√	√	√	√	√	
R50/R52/R53	Body	ZKE Central Body electronics BC1(Redesign)	√	√	√	√	√	
R50/R52/R53	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R50/R52/R53	Chassis	EHPS Electro-hydraulic steering assistance	√	√	√	√	√	
R50/R52/R53	Chassis	LEW Steering-angle sensor	√	√	√	√		
R50/R52/R53	Chassis	RDC Tyre pressure control	√	√	√	√	√	√
R50/R52/R53	Chassis	RPW tyre-blowout warning system	√	√	√	√		
R50/R52/R53	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
R50/R52/R53	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
R50/R52/R53	Drive	EWS Vehicle immobilizer	√	√	√	√	√	
R55/R56/R57	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R55/R56/R57	Body	AHM Trailer module	√	√	√	√	√	√
R55/R56/R57	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
R55/R56/R57	Body	CA Comfort access system	√	√	√	√		√
R55/R56/R57	Body	CAN communication analysis	√	√				
R55/R56/R57	Body	CCC-A Applications	√	√	√	√	√	√
R55/R56/R57	Body	CCC-ANT Aerial tuner	√	√	√	√	√	√
R55/R56/R57	Body	CCC-ASK Audio system controller	√	√	√	√	√	√
R55/R56/R57	Body	CCC-BO User interface	√	√	√	√	√	√
R55/R56/R57	Body	CCC-GW Gateway	√	√	√	√	√	√
R55/R56/R57	Body	CDC CD Changer	√	√	√		√	√

R55/R56/R57	Body	CID Central information display	√	√	√	√	√	√
R55/R56/R57	Body	CVM/CVM2 Convertible top module	√	√	√	√	√	√
R55/R56/R57	Body	DAB Digital tuner	√	√	√	√	√	√
R55/R56/R57	Body	FRM footwell module	√	√	√	√	√	√
R55/R56/R57	Body	IBOC Digital tuner US	√	√	√	√		√
R55/R56/R57	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R55/R56/R57	Body	IHKS Integrated heating/air-conditioning control	√	√	√	√	√	√
R55/R56/R57	Body	IHS Integrated heating control	√	√	√	√	√	√
R55/R56/R57	Body	INSTR Instrument cluster	√	√	√	√	√	√
R55/R56/R57	Body	JBE Junction-box electronics	√	√	√	√	√	√
R55/R56/R57	Body	JNAV Navigation system,Japan	√	√	√	√	√	√
R55/R56/R57	Body	MJOY MINI joystick	√	√	√	√	√	√
R55/R56/R57	Body	MOST system analysis	√	√	√			
R55/R56/R57	Body	PDC Park distance control	√	√	√	√	√	√
R55/R56/R57	Body	RAD Radio	√	√	√	√	√	√
R55/R56/R57	Body	RAD2-BO User interface	√	√	√	√	√	√
R55/R56/R57	Body	RAD2-GW Gateway	√	√	√	√	√	√
R55/R56/R57	Body	SDARS Satellite tuner	√	√	√	√	√	√
R55/R56/R57	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R55/R56/R57	Body	SZL Switch centre, steering column	√	√	√	√	√	√
R55/R56/R57	Body	ULF-SBX Interface box	√	√	√	√	√	√
R55/R56/R57	Body	ULF-SBX-H Interface box High	√	√	√	√	√	√
R55/R56/R57	Body	VM Video Module	√	√	√	√	√	√
R55/R56/R57	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R55/R56/R57	Chassis	EPS Electronic Power Steering	√	√	√	√	√	√
R55/R56/R57	Chassis	RDC Tyre pressure control	√	√	√	√	√	√
R55/R56/R57	Drive	CAS Car Access System	√	√	√	√	√	√
R55/R56/R57	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√

R55/R56/R57	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
R58/R59	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R58/R59	Body	AHM Trailer module	√	√	√	√	√	√
R58/R59	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
R58/R59	Body	CA Comfort access system	√	√	√	√		√
R58/R59	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	
R58/R59	Body	CHAMP-BO User interface	√	√	√	√	√	√
R58/R59	Body	CHAMP-GW Gateway	√	√	√	√	√	√
R58/R59	Body	CID Central information display	√	√	√	√	√	√
R58/R59	Body	FRM footwell module	√	√	√	√	√	√
R58/R59	Body	IBOC Digital tuner US	√	√	√	√		√
R58/R59	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R58/R59	Body	INSTR Instrument cluster	√	√	√	√	√	√
R58/R59	Body	JBE Junction-box electronics	√	√	√	√	√	√
R58/R59	Body	MJOY MINI joystick	√	√	√	√	√	√
R58/R59	Body	PDC Park distance control	√	√	√	√	√	√
R58/R59	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R58/R59	Body	SZL Steering column switch centre 2	√	√	√	√	√	√
R58/R59	Body	ULF-SBX Interface box	√	√	√	√	√	√
R58/R59	Body	ULF-SBX-H Interface box High	√	√	√	√	√	√
R58/R59	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R58/R59	Chassis	EDC Damper Control	√	√	√	√	√	√
R58/R59	Chassis	EPS Electronic Power Steering	√	√	√	√	√	√
R58/R59	Drive	CAS Car Access System	√	√	√	√	√	√
R58/R59	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
R58/R59	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
R60	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
R60	Body	AHM Trailer module	√	√	√	√	√	√

R60	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
R60	Body	CA Comfort access system	√	√	√	√		√
R60	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	
R60	Body	CHAMP-BO User interface	√	√	√	√	√	√
R60	Body	CHAMP-GW Gateway	√	√	√	√	√	√
R60	Body	CID Central information display	√	√	√	√	√	√
R60	Body	FRM footwell module	√	√	√	√	√	√
R60	Body	IBOC Digital tuner US	√	√	√	√		√
R60	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
R60	Body	INSTR Instrument cluster	√	√	√	√	√	√
R60	Body	JBE Junction-box electronics	√	√	√	√	√	√
R60	Body	MJOY MINI joystick	√	√	√	√	√	√
R60	Body	PDC Park distance control	√	√	√	√	√	√
R60	Body	SHD Sliding/tilting sunroof	√	√	√	√	√	√
R60	Body	SZL Steering column switch centre 2	√	√	√	√	√	√
R60	Body	ULF-SBX Interface box	√	√	√	√	√	√
R60	Body	ULF-SBX-H Interface box High	√	√	√	√	√	√
R60	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
R60	Chassis	EDC Damper Control	√	√	√	√	√	√
R60	Chassis	EPS Electronic Power Steering	√	√	√	√	√	√
R60	Drive	CAS Car Access System	√	√	√	√	√	√
R60	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
R60	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F56	Body	MRS/AB Airbag/ACSM	√	√	√	√		√
F56	Body	AHM Trailer module	√	√	√	√	√	√
F56	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F56	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F56	Body	ASD Active Sound Design	√	√	√	√	√	

F56	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	
F56	Body	CIC Car Information Computer	√	√	√	√	√	√
F56	Body	CON Controller	√	√	√	√	√	√
F56	Body	DVDC DVD Changer	√	√	√		√	√
F56	Body	FZD Function centre,roof	√	√	√	√	√	√
F56	Body	HKL Rear-lid lift	√	√	√	√	√	√
F56	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F56	Body	INSTR Instrument cluster	√	√	√	√	√	√
F56	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	
F56	Body	PMA Parking assistant	√	√	√	√	√	
F56	Body	SMFA Seat module,driver	√	√	√	√	√	√
F56	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F56	Body	ZGM Central Gateway Module	√	√	√			√
F56	Body	TRSVC_allround-view camera	√	√	√	√	√	
F56	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F56	Chassis	AL active steering	√	√	√	√		√
F56	Drive	CAS Car Access System	√	√	√	√	√	√
F56	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F56	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F54	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F54	Body	AHM Trailer module	√	√	√	√	√	√
F54	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F54	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F54	Body	ASD Active Sound Design	√	√	√	√	√	√
F54	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F54	Body	CIC Car Information Computer	√	√	√	√	√	√
F54	Body	CON Controller	√	√	√	√	√	√
F54	Body	DVDC DVD Changer	√	√	√	√	√	√

F54	Body	FZD Function centre,roof	√	√	√	√	√	√
F54	Body	HKL Rear-lid lift	√	√	√	√	√	√
F54	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F54	Body	INSTR Instrument cluster	√	√	√	√	√	√
F54	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F54	Body	PMA Parking assistant	√	√	√	√	√	√
F54	Body	SMFA Seat module,driver	√	√	√	√	√	√
F54	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F54	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F54	Body	TRSVC_allround-view camera	√	√	√	√	√	√
F54	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F54	Chassis	AL active steering	√	√	√	√	√	√
F54	Drive	CAS Car Access System	√	√	√	√	√	√
F54	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F54	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F55	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F55	Body	AHM Trailer module	√	√	√	√	√	√
F55	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F55	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F55	Body	ASD Active Sound Design	√	√	√	√	√	√
F55	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F55	Body	CIC Car Information Computer	√	√	√	√	√	√
F55	Body	CON Controller	√	√	√	√	√	√
F55	Body	DVDC DVD Changer	√	√	√	√	√	√
F55	Body	FZD Function centre,roof	√	√	√	√	√	√
F55	Body	HKL Rear-lid lift	√	√	√	√	√	√
F55	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F55	Body	INSTR Instrument cluster	√	√	√	√	√	√

F55	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F55	Body	PMA Parking assistant	√	√	√	√	√	√
F55	Body	SMFA Seat module,driver	√	√	√	√	√	√
F55	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F55	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F55	Body	TRSVC_allround-view camera	√	√	√	√	√	√
F55	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F55	Chassis	AL active steering	√	√	√	√	√	√
F55	Drive	CAS Car Access System	√	√	√	√	√	√
F55	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F55	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F57	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F57	Body	AHM Trailer module	√	√	√	√	√	√
F57	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F57	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F57	Body	ASD Active Sound Design	√	√	√	√	√	√
F57	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F57	Body	CIC Car Information Computer	√	√	√	√	√	√
F57	Body	CON Controller	√	√	√	√	√	√
F57	Body	DVDC DVD Changer	√	√	√	√	√	√
F57	Body	FZD Function centre,roof	√	√	√	√	√	√
F57	Body	HKL Rear-lid lift	√	√	√	√	√	√
F57	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F57	Body	INSTR Instrument cluster	√	√	√	√	√	√
F57	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F57	Body	PMA Parking assistant	√	√	√	√	√	√
F57	Body	SMFA Seat module,driver	√	√	√	√	√	√
F57	Body	SZL Switch centre, steering column	√	√	√	√	√	√

F57	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F57	Body	TRSVC_allround-view camera	√	√	√	√	√	√
F57	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F57	Chassis	AL active steering	√	√	√	√	√	√
F57	Drive	CAS Car Access System	√	√	√	√	√	√
F57	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F57	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√
F60	Body	MRS/AB Airbag/ACSM	√	√	√	√	√	√
F60	Body	AHM Trailer module	√	√	√	√	√	√
F60	Body	AMPH Hi-Fi amplifier	√	√	√	√	√	√
F60	Body	AMPT Top Hi-Fi amplifier	√	√	√	√	√	√
F60	Body	ASD Active Sound Design	√	√	√	√	√	√
F60	Body	CBX-ECALL Combox emergency call	√	√	√	√	√	√
F60	Body	CIC Car Information Computer	√	√	√	√	√	√
F60	Body	CON Controller	√	√	√	√	√	√
F60	Body	DVDC DVD Changer	√	√	√	√	√	√
F60	Body	FZD Function centre,roof	√	√	√	√	√	√
F60	Body	HKL Rear-lid lift	√	√	√	√	√	√
F60	Body	IHKA Heater/automatic A/C control	√	√	√	√	√	√
F60	Body	INSTR Instrument cluster	√	√	√	√	√	√
F60	Body	KAFAS Camera-based driver-assistance systems	√	√	√	√	√	√
F60	Body	PMA Parking assistant	√	√	√	√	√	√
F60	Body	SMFA Seat module,driver	√	√	√	√	√	√
F60	Body	SZL Switch centre, steering column	√	√	√	√	√	√
F60	Body	ZGM Central Gateway Module	√	√	√	√	√	√
F60	Body	TRSVC_allround-view camera	√	√	√	√	√	√
F60	Chassis	ABS/ASC/DSC Dynamic Stability Control	√	√	√	√	√	√
F60	Chassis	AL active steering	√	√	√	√	√	√

F60	Drive	CAS Car Access System	√	√	√	√	√	√
F60	Drive	DME/DDE(Engine Electronics)	√	√	√	√	√	√
F60	Drive	EGS/AGS(Transmission Control)	√	√	√	√	√	√

XTOOL

Service Function List

Part	Components	Status	Body Type
Body	Add production key		MINI_R50/R52/R53
Body	Add tuner profiles		MINI_R55/R56/R57
Chassis	Adjustment, steering-angle sensor	√	MINI_R55/R56/R57
Chassis	Adjustment, steering-torque sensor		MINI_R55/R56/R57
Drive	Balance test	√	MINI_R50/R52/R53
Chassis	Bleed routine	√	MINI_R55/R56/R57
Chassis	Brake line reversal check	√	MINI_R58/R59
Chassis	Calibration of DSC sensor	√	MINI_R55/R56/R57
Chassis	Calibration of DSC unit	√	MINI_R55/R56/R57
Body	CBS correction,Tester data		MINI_R55/R56/R57
Body	CBS correction,vehicle data	√	MINI_R55/R56/R57
Drive	Check gear-oil level		MINI_R50/R52/R53
Drive	Clear adaptation		MINI_R55/R56/R57
Chassis	Connection, brake lines		MINI_R50/R52/R53
Chassis	Connection, speed sensor		MINI_R50/R52/R53
Drive	Consumption calculation		MINI_R50/R52/R53
Body	Control-unit self-test		MINI_R50/R52/R53
Body	Create boot file again		MINI_R55/R56/R57
Drive	Check transmission oil level	√	MINI_R50/R52/R53
Drive	Replacemen/adaptation of CVT gearbox	√	MINI_R50/R52/R53
Drive	DDE-EWSIII		MINI_R50/R52/R53
Body	Delete transport mode	√	MINI_R50/R52/R53
Body	Delete transport mode		MINI_R55/R56/R57
Body	Delivery position	√	MINI_R55/R56/R57
Body	Disable/enable	√	MINI_R55/R56/R57

Body	Disable/enable key		MINI_R50/R52/R53
Drive	Disable/enable key	√	MINI_R50/R52/R53
Body	DME(DDE)-EWS-III adjustment		MINI_R50/R52/R53
Drive	DME(DDE)-EWS-III adjustment		MINI_R50/R52/R53
Drive	DME(DDE)-EWS-III adjustment		MINI_R50/R52/R53
Body	DVD lock		MINI_R55/R56/R57
Body	DVD lock		MINI_R50/R52/R53
Body	DWA activations		MINI_R50/R52/R53
Drive	DME: Clear adaptations	√	MINI_R58/R59 MINI_R60
Drive	DME: Delete adaptation variable camshaft timing control	√	MINI_R58/R59 MINI_R60
Chassis	DSC bleeding routine	√	MINI_R58/R59
Chassis	DSC sensor adjustment	√	MINI_R58/R59
Drive	Engine internal pressure		MINI_R55/R56/R57
Body	Enter retrofitting		MINI_R50/R52/R53
Body	Evaluate battery charge state	√	MINI_R55/R56/R57
Body	Evaluate closed-circuit current monitoring	√	MINI_R55/R56/R57
Drive	Fuel consumption display adjustment	√	MINI_R58/R59
Drive	Idle speed	√	MINI_R55/R56/R57 MINI_R58/R59 MINI_R60
Drive	Idle speed	√	MINI_R50/R52/R53
Body	Initial operation, A/C compressor	√	MINI_R55/R56/R57
Body	Initialize power window	√	MINI_R55/R56/R57
Body	Initialize rain sensor	√	MINI_R50/R52/R53
Body	Initialize rain/light sensor	√	MINI_R55/R56/R57
Body	Initialize slide/tilt sunroof	√	MINI_R55/R56/R57

Drive	Injector classification		MINI_R50/R52/R53
Body	Key status		MINI_R50/R52/R53
Drive	Key status		MINI_R50/R52/R53
Chassis	Lateral acceleration sensor		MINI_R50/R52/R53
Drive	Learning Valvetronic limit positions	√	MINI_E60
Drive	Learning/writing, zero-gear sensor		MINI_R55/R56/R57
Body	Log mobile phone on		MINI_R55/R56/R57
Body	Log mobile phone on		MINI_R55/R56/R57
Body	Log remote control key on/off		MINI_R50/R52/R53
Drive	MFL and air conditioning		MINI_R50/R52/R53
Chassis	Mix-up check, brake lines	√	MINI_R55/R56/R57
Drive	OBD readiness codes		MINI_R50/R52/R53
Drive	OBD readiness codes		MINI_R55/R56/R57
Body	Personalisation number	√	MINI_R55/R56/R57
Drive	Plausible start times		MINI_R55/R56/R57
Body	Power-down command	√	MINI_R55/R56/R57
Chassis	Pressure sensors		MINI_R50/R52/R53
Drive	Read AV accumulator		MINI_R55/R56/R57
Body	Read coding data	√	MINI_R50/R52/R53
Body	Read coding data	√	MINI_R55/R56/R57
Body	Read out data		MINI_R55/R56/R57
Body	Register battery change	√	MINI_R55/R56/R57
Drive	Replacement/adaptation, CVT transmission		MINI_R50/R52/R53
Drive	Reset adaptation values	√	MINI_R55/R56/R57
Drive	Reset adaptations	√	MINI_R50/R52/R53
Body	Reset CBS Condition Based Service	√	MINI_R55/R56/R57
Body	Reset HIP module		MINI_R55/R56/R57
Drive	Reset internal ELV fault counter		MINI_R55/R56/R57

Body	Reset internal ELV fault counter		MINI_R55/R56/R57
Body	Radio control key test	√	MINI_R50/R52/R53
Body	Remote key test	√	MINI_R50/R52/R53
Body	Save configuration of MOST ring		MINI_R55/R56/R57
Body	Set transport mode		MINI_R55/R56/R57
Drive	Starting fuel delivery		MINI_R50/R52/R53
Chassis	Steering-angle sensor		MINI_R50/R52/R53 MINI_R58/R59
Drive	System check MSA		MINI_R55/R56/R57
Body	Sleep mode		MINI_R50/R52/R53
Chassis	Start-up, EPS unit	√	MINI_R60
Chassis	Ventilation		MINI_R50/R52/R53
Drive	Valvetronic adaptation limit positions	√	MINI_R58/R59
Body	With tester		MINI_R50/R52/R53
Body	Without tester		MINI_R50/R52/R53

XT-TOOL